

Vehicle Coverage

[Diagnostic Tools](#) [Other Tools](#)

Product Model

Vehicle Make

Vehicle Model

Year

Function/Sub-function

SEARCH

Vehicle Model	Year	Engine	Chassis	Series	Vehicle Type	System	Sub-system	Function	Sub-function	Version	Note
Model S	/	/	/	/		Gateway	/	Live data	/	Above Tesla_V1.00	/
Model S	/	/	/	/		Gateway	/	Special Function	Clear gateway DTC	Above Tesla_V1.00	/
Model S	/	/	/	/		/	/	Alerts	/	Above Tesla_V1.00	/
Model S	/	/	/	/		/	/	Mode selection	Display factory mode window	Above Tesla_V1.00	/
Model S	/	/	/	/		/	/	Mode selection	Enter developer mode	Above Tesla_V1.00	/
Model S	/	/	/	/		/	/	Mode selection	Enter diagnostic mode	Above Tesla_V1.00	/
Model S	/	/	/	/		/	/	Mode selection	Enter factory mode	Above Tesla_V1.00	/
Model S	/	/	/	/		/	/	Mode selection	Exit developer mode	Above Tesla_V1.00	/
Model S	/	/	/	/		/	/	Mode selection	Exit diagnostic mode	Above Tesla_V1.00	/
Model S	/	/	/	/		/	/	Mode selection	Exit factory mode	Above Tesla_V1.00	/
Model S	/	/	/	/		/	/	Mode selection	Open Factory Mode	Above Tesla_V1.00	/
Model S	/	/	/	/		Instrument Cluster	/	Special Function	Hard Reset	Above Tesla_V1.00	/
Model S	/	/	/	/		Instrument Cluster	/	Special Function	Soft Reset	Above Tesla_V1.00	/
Model S	/	/	/	/		Battery Management System	/	ECU information	/	Above Tesla_V1.00	/
Model S	/	/	/	/		Battery Management System	/	Special Function	Hard Reset	Above Tesla_V1.00	/
Model S	/	/	/	/		Battery Management System	/	Special Function	Soft Reset	Above Tesla_V1.00	/
Model S	/	/	/	/		Battery Management System	/	Special Function	Clear contactor stress index	Above Tesla_V1.00	/

Vehicle Model	Year	Engine	Chassis	Series	Vehicle Type	System	Sub-system	Function	Sub-function	Version	Note
Model S	/	/	/	/		Battery Management System	/	Special Function	Reset W163	Above Tesla_V1.00	/
Model S	/	/	/	/		Battery Management System	/	Special Function	Reset contactor WOT counter	Above Tesla_V1.00	/
Model S	/	/	/	/		Battery Management System	/	Special Function	Reset open positive contactor	Above Tesla_V1.00	/
Model S	/	/	/	/		Battery Management System	/	Live data	/	Above Tesla_V1.00	/
Model S	/	/	/	/		Battery Management System	/	Special Function	BMB jump to boot updater	Above Tesla_V1.00	/
Model S	/	/	/	/		Battery Management System	/	Special Function	Reset f027	Above Tesla_V1.00	/
Model S	/	/	/	/		Battery Management System	/	Special Function	Reset w026	Above Tesla_V1.00	/
Model S	/	/	/	/		Battery Management System	/	Special Function	Reset w152	Above Tesla_V1.00	/
Model S	/	/	/	/		Battery Management System	/	Special Function	Reset w153	Above Tesla_V1.00	/
Model S	/	/	/	/		Steering Column Control Module	/	Special Function	Hard Reset	Above Tesla_V1.00	/
Model S	/	/	/	/		Steering Column Control Module	/	Special Function	Soft Reset	Above Tesla_V1.00	/
Model S	/	/	/	/		Steering Column Control Module	/	Live data	/	Above Tesla_V1.00	/
Model S	/	/	/	/		Passenger Door Module	/	Special Function	Hard Reset	Above Tesla_V1.00	/
Model S	/	/	/	/		Passenger Door Module	/	Special Function	Soft Reset	Above Tesla_V1.00	/
Model S	/	/	/	/		Passenger Door Module	/	Trouble codes	/	Above Tesla_V1.00	/
Model S	/	/	/	/		Passenger Door Module	/	Live data	/	Above Tesla_V1.00	/
Model S	/	/	/	/		Supplemental Deployment Module	/	ECU information	/	Above Tesla_V1.00	/
Model S	/	/	/	/		Supplemental Deployment Module	/	Special Function	Hard Reset	Above Tesla_V1.00	/
Model S	/	/	/	/		Supplemental Deployment Module	/	Special Function	Soft Reset	Above Tesla_V1.00	/
Model S	/	/	/	/		Supplemental Deployment Module	/	Trouble codes	/	Above Tesla_V1.00	/
Model S	/	/	/	/		Supplemental Deployment Module	/	Special Function	Erase crash record	Above Tesla_V1.00	/
Model S	/	/	/	/		Body Controller	/	Special Function	Hard Reset	Above Tesla_V1.00	/
Model S	/	/	/	/		Body Controller	/	Special Function	Soft Reset	Above Tesla_V1.00	/
Model S	/	/	/	/		Body Controller	/	Trouble codes	/	Above Tesla_V1.00	/
Model S	/	/	/	/		Body Controller	/	Live data	/	Above Tesla_V1.00	/
Model S	/	/	/	/		Body Controller	/	Special Function	Body controller	Above Tesla_V1.00	/
Model S	/	/	/	/		Center Radar	/	ECU information	/	Above Tesla_V1.00	/
Model S	/	/	/	/		Center Radar	/	Special Function	Hard Reset	Above Tesla_V1.00	/
Model S	/	/	/	/		Center Radar	/	Special Function	Soft Reset	Above Tesla_V1.00	/
Model S	/	/	/	/		Center Radar	/	Trouble codes	/	Above Tesla_V1.00	/
Model S	/	/	/	/		Charging Port	/	ECU information	/	Above Tesla_V1.00	/
Model S	/	/	/	/		Charging Port	/	Special Function	Hard Reset	Above Tesla_V1.00	/

Vehicle Model	Year	Engine	Chassis	Series	Vehicle Type	System	Sub-system	Function	Sub-function	Version	Note
Model S	/	/	/	/		Charging Port	/	Special Function	Soft Reset	Above Tesla_V1.00	/
Model S	/	/	/	/		Charging Port	/	Special Function	Charge port latch calibration	Above Tesla_V1.00	/
Model S	/	/	/	/		Charging Port	/	Live data	/	Above Tesla_V1.00	/
Model S	/	/	/	/		Charging Port	/	Special Function	Charge port door sensor calibration	Above Tesla_V1.00	/
Model S	/	/	/	/		Compressor	/	Special Function	Hard Reset	Above Tesla_V1.00	/
Model S	/	/	/	/		Compressor	/	Special Function	Soft Reset	Above Tesla_V1.00	/
Model S	/	/	/	/		DC-DC	/	Special Function	Hard Reset	Above Tesla_V1.00	/
Model S	/	/	/	/		DC-DC	/	Special Function	Soft Reset	Above Tesla_V1.00	/
Model S	/	/	/	/		DC-DC	/	Live data	/	Above Tesla_V1.00	/
Model S	/	/	/	/		Drive Inverter	/	ECU information	/	Above Tesla_V1.00	/
Model S	/	/	/	/		Drive Inverter	/	Special Function	Hard Reset	Above Tesla_V1.00	/
Model S	/	/	/	/		Drive Inverter	/	Special Function	Soft Reset	Above Tesla_V1.00	/
Model S	/	/	/	/		Drive Inverter	/	Live data	/	Above Tesla_V1.00	/
Model S	/	/	/	/		Drive Inverter System	/	ECU information	/	Above Tesla_V1.00	/
Model S	/	/	/	/		Drive Inverter System	/	Special Function	Hard Reset	Above Tesla_V1.00	/
Model S	/	/	/	/		Drive Inverter System	/	Special Function	Soft Reset	Above Tesla_V1.00	/
Model S	/	/	/	/		Drive Inverter System	/	Live data	/	Above Tesla_V1.00	/
Model S	/	/	/	/		Driver Assist	/	Special Function	Hard Reset	Above Tesla_V1.00	/
Model S	/	/	/	/		Driver Assist	/	Special Function	Soft Reset	Above Tesla_V1.00	/
Model S	/	/	/	/		Driver Assist	/	Live data	/	Above Tesla_V1.00	/
Model S	/	/	/	/		Driver Door Controller	/	Special Function	Hard Reset	Above Tesla_V1.00	/
Model S	/	/	/	/		Driver Door Controller	/	Special Function	Soft Reset	Above Tesla_V1.00	/
Model S	/	/	/	/		Driver Door Controller	/	Trouble codes	/	Above Tesla_V1.00	/
Model S	/	/	/	/		Driver Door Controller	/	Live data	/	Above Tesla_V1.00	/
Model S	/	/	/	/		Driver Side Memory Seat Module	/	Special Function	Hard Reset	Above Tesla_V1.00	/
Model S	/	/	/	/		Driver Side Memory Seat Module	/	Special Function	Soft Reset	Above Tesla_V1.00	/
Model S	/	/	/	/		Driver Side Memory Seat Module	/	Trouble codes	/	Above Tesla_V1.00	/
Model S	/	/	/	/		Driver Side Memory Seat Module	/	Live data	/	Above Tesla_V1.00	/
Model S	/	/	/	/		Electric Park Brake	/	ECU information	/	Above Tesla_V1.00	/
Model S	/	/	/	/		Electric Park Brake	/	Special Function	Hard Reset	Above Tesla_V1.00	/
Model S	/	/	/	/		Electric Park Brake	/	Special Function	Soft Reset	Above Tesla_V1.00	/
Model S	/	/	/	/		Electric Park Brake	/	Special Function	Service mode	Above Tesla_V1.00	/

Vehicle Model	Year	Engine	Chassis	Series	Vehicle Type	System	Sub-system	Function	Sub-function	Version	Note
Model S	/	/	/	/		Electric Park Brake	/	Live data	/	Above Tesla_V1.00	/
Model S	/	/	/	/		Electric Park Brake Monitor	/	Special Function	Hard Reset	Above Tesla_V1.00	/
Model S	/	/	/	/		Electric Park Brake Monitor	/	Special Function	Soft Reset	Above Tesla_V1.00	/
Model S	/	/	/	/		Electric Park Brake Monitor	/	Live data	/	Above Tesla_V1.00	/
Model S	/	/	/	/		Electric Power Assisted Steering	/	ECU information	/	Above Tesla_V1.00	/
Model S	/	/	/	/		Electric Power Assisted Steering	/	Special Function	Hard Reset	Above Tesla_V1.00	/
Model S	/	/	/	/		Electric Power Assisted Steering	/	Special Function	Soft Reset	Above Tesla_V1.00	/
Model S	/	/	/	/		Electric Power Assisted Steering	/	Trouble codes	/	Above Tesla_V1.00	/
Model S	/	/	/	/		Electric Power Assisted Steering	/	Live data	/	Above Tesla_V1.00	/
Model S	/	/	/	/		Electric Stability Program	/	ECU information	/	Above Tesla_V1.00	/
Model S	/	/	/	/		Electric Stability Program	/	Special Function	Hard Reset	Above Tesla_V1.00	/
Model S	/	/	/	/		Electric Stability Program	/	Special Function	Soft Reset	Above Tesla_V1.00	/
Model S	/	/	/	/		Electric Stability Program	/	Trouble codes	/	Above Tesla_V1.00	/
Model S	/	/	/	/		Electric Stability Program	/	Special Function	Brake bleeding	Above Tesla_V1.00	/
Model S	/	/	/	/		Electric Stability Program	/	Special Function	Steering angle sensor calibration	Above Tesla_V1.00	/
Model S	/	/	/	/		Electric Stability Program	/	Live data	/	Above Tesla_V1.00	/
Model S	/	/	/	/		Electric Stability Program 2	/	ECU information	/	Above Tesla_V1.00	/
Model S	/	/	/	/		Electric Stability Program 2	/	Special Function	Hard Reset	Above Tesla_V1.00	/
Model S	/	/	/	/		Electric Stability Program 2	/	Special Function	Soft Reset	Above Tesla_V1.00	/
Model S	/	/	/	/		Electric Stability Program 2	/	Trouble codes	/	Above Tesla_V1.00	/
Model S	/	/	/	/		Front Driver Door Handles	/	Special Function	Hard Reset	Above Tesla_V1.00	/
Model S	/	/	/	/		Front Driver Door Handles	/	Special Function	Soft Reset	Above Tesla_V1.00	/
Model S	/	/	/	/		Front Passenger Door Handles	/	Special Function	Hard Reset	Above Tesla_V1.00	/
Model S	/	/	/	/		Front Passenger Door Handles	/	Special Function	Soft Reset	Above Tesla_V1.00	/
Model S	/	/	/	/		High Voltage Battery System	/	Special Function	Hard Reset	Above Tesla_V1.00	/
Model S	/	/	/	/		High Voltage Battery System	/	Special Function	Soft Reset	Above Tesla_V1.00	/
Model S	/	/	/	/		Left Radar	/	Special Function	Hard Reset	Above Tesla_V1.00	/
Model S	/	/	/	/		Left Radar	/	Special Function	Soft Reset	Above Tesla_V1.00	/
Model S	/	/	/	/		Liftgate Controller	/	Special Function	Hard Reset	Above Tesla_V1.00	/
Model S	/	/	/	/		Liftgate Controller	/	Special Function	Soft Reset	Above Tesla_V1.00	/
Model S	/	/	/	/		Liftgate Controller	/	Trouble codes	/	Above Tesla_V1.00	/
Model S	/	/	/	/		Master Charger	/	ECU information	/	Above Tesla_V1.00	/

Vehicle Model	Year	Engine	Chassis	Series	Vehicle Type	System	Sub-system	Function	Sub-function	Version	Note
Model S	/	/	/	/		Master Charger	/	Special Function	Hard Reset	Above Tesla_V1.00	/
Model S	/	/	/	/		Master Charger	/	Special Function	Soft Reset	Above Tesla_V1.00	/
Model S	/	/	/	/		Master Charger	/	Trouble codes	/	Above Tesla_V1.00	/
Model S	/	/	/	/		Master Charger	/	Live data	/	Above Tesla_V1.00	/
Model S	/	/	/	/		Master Charger 6	/	ECU information	/	Above Tesla_V1.00	/
Model S	/	/	/	/		Master Charger 6	/	Special Function	Hard Reset	Above Tesla_V1.00	/
Model S	/	/	/	/		Master Charger 6	/	Special Function	Soft Reset	Above Tesla_V1.00	/
Model S	/	/	/	/		Master Charger 6	/	Live data	/	Above Tesla_V1.00	/
Model S	/	/	/	/		Master Charger 6	/	Special Function	Check fast charge disabled	Above Tesla_V1.00	/
Model S	/	/	/	/		Master Charger 6	/	Special Function	Clear fast charge disabled	Above Tesla_V1.00	/
Model S	/	/	/	/		Master Charger PH1	/	Special Function	Hard Reset	Above Tesla_V1.00	/
Model S	/	/	/	/		Master Charger PH1	/	Special Function	Soft Reset	Above Tesla_V1.00	/
Model S	/	/	/	/		Master Charger PH2	/	Special Function	Hard Reset	Above Tesla_V1.00	/
Model S	/	/	/	/		Master Charger PH2	/	Special Function	Soft Reset	Above Tesla_V1.00	/
Model S	/	/	/	/		Master Charger PH3	/	Special Function	Hard Reset	Above Tesla_V1.00	/
Model S	/	/	/	/		Master Charger PH3	/	Special Function	Soft Reset	Above Tesla_V1.00	/
Model S	/	/	/	/		Master Charger Relay	/	ECU information	/	Above Tesla_V1.00	/
Model S	/	/	/	/		Master Charger Relay	/	Special Function	Hard Reset	Above Tesla_V1.00	/
Model S	/	/	/	/		Master Charger Relay	/	Special Function	Soft Reset	Above Tesla_V1.00	/
Model S	/	/	/	/		Memory Seat Module	/	Special Function	Hard Reset	Above Tesla_V1.00	/
Model S	/	/	/	/		Memory Seat Module	/	Special Function	Soft Reset	Above Tesla_V1.00	/
Model S	/	/	/	/		Memory Seat Module	/	Trouble codes	/	Above Tesla_V1.00	/
Model S	/	/	/	/		Occupant Classification System	/	ECU information	/	Above Tesla_V1.00	/
Model S	/	/	/	/		Occupant Classification System	/	Special Function	Hard Reset	Above Tesla_V1.00	/
Model S	/	/	/	/		Occupant Classification System	/	Special Function	Soft Reset	Above Tesla_V1.00	/
Model S	/	/	/	/		Occupant Classification System	/	Trouble codes	/	Above Tesla_V1.00	/
Model S	/	/	/	/		Occupant Classification System	/	Special Function	Occupant Classification System (OCS) reset	Above Tesla_V1.00	/
Model S	/	/	/	/		Park Assist System	/	Special Function	Hard Reset	Above Tesla_V1.00	/
Model S	/	/	/	/		Park Assist System	/	Special Function	Soft Reset	Above Tesla_V1.00	/
Model S	/	/	/	/		Park Assist System	/	Trouble codes	/	Above Tesla_V1.00	/
Model S	/	/	/	/		Park Assist System	/	Live data	/	Above Tesla_V1.00	/
Model S	/	/	/	/		Park Assist System 2	/	Special Function	Hard Reset	Above Tesla_V1.00	/

Vehicle Model	Year	Engine	Chassis	Series	Vehicle Type	System	Sub-system	Function	Sub-function	Version	Note
Model S	/	/	/	/		Park Assist System 2	/	Special Function	Soft Reset	Above Tesla_V1.00	/
Model S	/	/	/	/		Passenger Side Memory Seat Module	/	Special Function	Hard Reset	Above Tesla_V1.00	/
Model S	/	/	/	/		Passenger Side Memory Seat Module	/	Special Function	Soft Reset	Above Tesla_V1.00	/
Model S	/	/	/	/		Passenger Side Memory Seat Module	/	Trouble codes	/	Above Tesla_V1.00	/
Model S	/	/	/	/		Passenger Side Memory Seat Module	/	Live data	/	Above Tesla_V1.00	/
Model S	/	/	/	/		Pedal Monitor	/	ECU information	/	Above Tesla_V1.00	/
Model S	/	/	/	/		Pedal Monitor	/	Special Function	Hard Reset	Above Tesla_V1.00	/
Model S	/	/	/	/		Pedal Monitor	/	Special Function	Soft Reset	Above Tesla_V1.00	/
Model S	/	/	/	/		Pedal Monitor	/	Live data	/	Above Tesla_V1.00	/
Model S	/	/	/	/		Positive Temperature Coefficient	/	Special Function	Hard Reset	Above Tesla_V1.00	/
Model S	/	/	/	/		Positive Temperature Coefficient	/	Special Function	Soft Reset	Above Tesla_V1.00	/
Model S	/	/	/	/		Potentiometer System	/	Special Function	Hard Reset	Above Tesla_V1.00	/
Model S	/	/	/	/		Potentiometer System	/	Special Function	Soft Reset	Above Tesla_V1.00	/
Model S	/	/	/	/		Rear Driver Door Handles	/	Special Function	Hard Reset	Above Tesla_V1.00	/
Model S	/	/	/	/		Rear Driver Door Handles	/	Special Function	Soft Reset	Above Tesla_V1.00	/
Model S	/	/	/	/		Rear Passenger Door Handles	/	Special Function	Hard Reset	Above Tesla_V1.00	/
Model S	/	/	/	/		Rear Passenger Door Handles	/	Special Function	Soft Reset	Above Tesla_V1.00	/
Model S	/	/	/	/		Remote Climate Control Module	/	Special Function	Hard Reset	Above Tesla_V1.00	/
Model S	/	/	/	/		Remote Climate Control Module	/	Special Function	Soft Reset	Above Tesla_V1.00	/
Model S	/	/	/	/		Remote Climate Control Module	/	Live data	/	Above Tesla_V1.00	/
Model S	/	/	/	/		Restraints Controller Module	/	ECU information	/	Above Tesla_V1.00	/
Model S	/	/	/	/		Restraints Controller Module	/	Special Function	Hard Reset	Above Tesla_V1.00	/
Model S	/	/	/	/		Restraints Controller Module	/	Special Function	Soft Reset	Above Tesla_V1.00	/
Model S	/	/	/	/		Restraints Controller Module	/	Trouble codes	/	Above Tesla_V1.00	/
Model S	/	/	/	/		Restraints Controller Module	/	Live data	/	Above Tesla_V1.00	/
Model S	/	/	/	/		Right Radar	/	Special Function	Hard Reset	Above Tesla_V1.00	/
Model S	/	/	/	/		Right Radar	/	Special Function	Soft Reset	Above Tesla_V1.00	/
Model S	/	/	/	/		Security Controller	/	Special Function	Hard Reset	Above Tesla_V1.00	/
Model S	/	/	/	/		Security Controller	/	Special Function	Soft Reset	Above Tesla_V1.00	/
Model S	/	/	/	/		Security Controller	/	Trouble codes	/	Above Tesla_V1.00	/
Model S	/	/	/	/		Security Controller	/	Live data	/	Above Tesla_V1.00	/
Model S	/	/	/	/		Security Controller	/	Special Function	Manual key learning	Above Tesla_V1.00	/

Vehicle Model	Year	Engine	Chassis	Series	Vehicle Type	System	Sub-system	Function	Sub-function	Version	Note
Model S	/	/	/	/		Security Controller	/	Special Function	Reset remote unlock security key	Above Tesla_V1.00	/
Model S	/	/	/	/		Security Controller	/	Special Function	Security controller	Above Tesla_V1.00	/
Model S	/	/	/	/		Slave Charger	/	Special Function	Hard Reset	Above Tesla_V1.00	/
Model S	/	/	/	/		Slave Charger	/	Special Function	Soft Reset	Above Tesla_V1.00	/
Model S	/	/	/	/		Slave Charger	/	Trouble codes	/	Above Tesla_V1.00	/
Model S	/	/	/	/		Slave Charger	/	Live data	/	Above Tesla_V1.00	/
Model S	/	/	/	/		Slave Charger PH1	/	Special Function	Hard Reset	Above Tesla_V1.00	/
Model S	/	/	/	/		Slave Charger PH1	/	Special Function	Soft Reset	Above Tesla_V1.00	/
Model S	/	/	/	/		Slave Charger PH2	/	Special Function	Hard Reset	Above Tesla_V1.00	/
Model S	/	/	/	/		Slave Charger PH2	/	Special Function	Soft Reset	Above Tesla_V1.00	/
Model S	/	/	/	/		Slave Charger PH3	/	Special Function	Hard Reset	Above Tesla_V1.00	/
Model S	/	/	/	/		Slave Charger PH3	/	Special Function	Soft Reset	Above Tesla_V1.00	/
Model S	/	/	/	/		Sunroof Controller	/	Special Function	Hard Reset	Above Tesla_V1.00	/
Model S	/	/	/	/		Sunroof Controller	/	Special Function	Soft Reset	Above Tesla_V1.00	/
Model S	/	/	/	/		Sunroof Controller	/	Trouble codes	/	Above Tesla_V1.00	/
Model S	/	/	/	/		Tesla Air Suspension System	/	ECU information	/	Above Tesla_V1.00	/
Model S	/	/	/	/		Tesla Air Suspension System	/	Special Function	Hard Reset	Above Tesla_V1.00	/
Model S	/	/	/	/		Tesla Air Suspension System	/	Special Function	Soft Reset	Above Tesla_V1.00	/
Model S	/	/	/	/		Tesla Air Suspension System	/	Special Function	Air Suspension Leveling High	Above Tesla_V1.00	/
Model S	/	/	/	/		Tesla Air Suspension System	/	Special Function	Air Suspension Leveling Low	Above Tesla_V1.00	/
Model S	/	/	/	/		Tesla Air Suspension System	/	Special Function	Air Suspension Leveling Standard	Above Tesla_V1.00	/
Model S	/	/	/	/		Tesla Air Suspension System	/	Special Function	Air suspension measure pressures	Above Tesla_V1.00	/
Model S	/	/	/	/		Tesla Air Suspension System	/	Special Function	Reset air suspension crash flag	Above Tesla_V1.00	/
Model S	/	/	/	/		Tesla Air Suspension System	/	Live data	/	Above Tesla_V1.00	/
Model S	/	/	/	/		Tesla Air Suspension System	/	Special Function	Air suspension leveling - very high	Above Tesla_V1.00	/
Model S	/	/	/	/		Tesla Air Suspension System	/	Special Function	Air suspension leveling - very low	Above Tesla_V1.00	/
Model S	/	/	/	/		Tesla Air Suspension System	/	Special Function	Finish Service mode for air suspension	Above Tesla_V1.00	/
Model S	/	/	/	/		Tesla Air Suspension System	/	Special Function	Tesla Air Suspension (TAS) service mode	Above Tesla_V1.00	/
Model S	/	/	/	/		Thermal Controller	/	ECU information	/	Above Tesla_V1.00	/
Model S	/	/	/	/		Thermal Controller	/	Special Function	Hard Reset	Above Tesla_V1.00	/
Model S	/	/	/	/		Thermal Controller	/	Special Function	Soft Reset	Above Tesla_V1.00	/
Model S	/	/	/	/		Thermal Controller	/	Trouble codes	/	Above Tesla_V1.00	/

Vehicle Model	Year	Engine	Chassis	Series	Vehicle Type	System	Sub-system	Function	Sub-function	Version	Note
Model S	/	/	/	/		Thermal Controller	/	Special Function	Start refill or drain	Above Tesla_V1.00	/
Model S	/	/	/	/		Thermal Controller	/	Special Function	Stop refill or drain	Above Tesla_V1.00	/
Model S	/	/	/	/		Thermal Controller	/	Live data	/	Above Tesla_V1.00	/
Model S	/	/	/	/		Thermal Controller	/	Special Function	Perform 'Coolant air purge'	Above Tesla_V1.00	/
Model S	/	/	/	/		Tuner	/	Special Function	Hard Reset	Above Tesla_V1.00	/
Model S	/	/	/	/		Tuner	/	Special Function	Soft Reset	Above Tesla_V1.00	/
Model S	/	/	/	/		Tyre Pressure Monitor System	/	ECU information	/	Above Tesla_V1.00	/
Model S	/	/	/	/		Tyre Pressure Monitor System	/	Special Function	Hard Reset	Above Tesla_V1.00	/
Model S	/	/	/	/		Tyre Pressure Monitor System	/	Special Function	Soft Reset	Above Tesla_V1.00	/
Model S	/	/	/	/		Tyre Pressure Monitor System	/	Trouble codes	/	Above Tesla_V1.00	/
Model S	/	/	/	/		Tyre Pressure Monitor System	/	Special Function	Read TPMS sensor ID	Above Tesla_V1.00	/
Model S	/	/	/	/		Tyre Pressure Monitor System	/	Special Function	Write TPMS sensor ID	Above Tesla_V1.00	/
Model S	/	/	/	/		Tyre Pressure Monitor System	/	Live data	/	Above Tesla_V1.00	/
Model S	/	/	/	/		eFUSE	/	ECU information	/	Above Tesla_V1.00	/
Model S	/	/	/	/		eFUSE	/	Special Function	Hard Reset	Above Tesla_V1.00	/
Model S	/	/	/	/		eFUSE	/	Special Function	Soft Reset	Above Tesla_V1.00	/
Model S	/	/	/	/		eFUSE	/	Live data	/	Above Tesla_V1.00	/
Model S	/	/	/	/		iBooster	/	ECU information	/	Above Tesla_V1.00	/
Model S	/	/	/	/		iBooster	/	Special Function	Hard Reset	Above Tesla_V1.00	/
Model S	/	/	/	/		iBooster	/	Special Function	Soft Reset	Above Tesla_V1.00	/
Model S	/	/	/	/		iBooster	/	Trouble codes	/	Above Tesla_V1.00	/
Model S	/	/	/	/		iBooster	/	Live data	/	Above Tesla_V1.00	/
Model S	/	/	/	/		Slave Charger 6	/	Live data	/	Above Tesla_V1.00	/
Model X	/	/	/	/		Gateway	/	Live data	/	Above Tesla_V1.00	/
Model X	/	/	/	/		Gateway	/	Special Function	Clear gateway DTC	Above Tesla_V1.00	/
Model X	/	/	/	/		/	/	Alerts	/	Above Tesla_V1.00	/
Model X	/	/	/	/		/	/	Mode selection	Display factory mode window	Above Tesla_V1.00	/
Model X	/	/	/	/		/	/	Mode selection	Enter developer mode	Above Tesla_V1.00	/
Model X	/	/	/	/		/	/	Mode selection	Enter diagnostic mode	Above Tesla_V1.00	/
Model X	/	/	/	/		/	/	Mode selection	Enter factory mode	Above Tesla_V1.00	/
Model X	/	/	/	/		/	/	Mode selection	Exit developer mode	Above Tesla_V1.00	/
Model X	/	/	/	/		/	/	Mode selection	Exit diagnostic mode	Above Tesla_V1.00	/

Vehicle Model	Year	Engine	Chassis	Series	Vehicle Type	System	Sub-system	Function	Sub-function	Version	Note
Model X	/	/	/	/		/	/	Mode selection	Exit factory mode	Above Tesla_V1.00	/
Model X	/	/	/	/		/	/	Mode selection	Open Factory Mode	Above Tesla_V1.00	/
Model X	/	/	/	/		Instrument Cluster	/	Special Function	Hard Reset	Above Tesla_V1.00	/
Model X	/	/	/	/		Instrument Cluster	/	Special Function	Soft Reset	Above Tesla_V1.00	/
Model X	/	/	/	/		Battery Management System	/	ECU information	/	Above Tesla_V1.00	/
Model X	/	/	/	/		Battery Management System	/	Special Function	Hard Reset	Above Tesla_V1.00	/
Model X	/	/	/	/		Battery Management System	/	Special Function	Soft Reset	Above Tesla_V1.00	/
Model X	/	/	/	/		Battery Management System	/	Special Function	Clear contactor stress index	Above Tesla_V1.00	/
Model X	/	/	/	/		Battery Management System	/	Special Function	Reset W163	Above Tesla_V1.00	/
Model X	/	/	/	/		Battery Management System	/	Special Function	Reset contactor WOT counter	Above Tesla_V1.00	/
Model X	/	/	/	/		Battery Management System	/	Special Function	Reset open positive contactor	Above Tesla_V1.00	/
Model X	/	/	/	/		Battery Management System	/	Live data	/	Above Tesla_V1.00	/
Model X	/	/	/	/		Battery Management System	/	Special Function	BMB jump to boot updater	Above Tesla_V1.00	/
Model X	/	/	/	/		Battery Management System	/	Special Function	Reset f027	Above Tesla_V1.00	/
Model X	/	/	/	/		Battery Management System	/	Special Function	Reset w026	Above Tesla_V1.00	/
Model X	/	/	/	/		Battery Management System	/	Special Function	Reset w152	Above Tesla_V1.00	/
Model X	/	/	/	/		Battery Management System	/	Special Function	Reset w153	Above Tesla_V1.00	/
Model X	/	/	/	/		Steering Column Control Module	/	Special Function	Hard Reset	Above Tesla_V1.00	/
Model X	/	/	/	/		Steering Column Control Module	/	Special Function	Soft Reset	Above Tesla_V1.00	/
Model X	/	/	/	/		Steering Column Control Module	/	Live data	/	Above Tesla_V1.00	/
Model X	/	/	/	/		Passenger Door Module	/	Special Function	Hard Reset	Above Tesla_V1.00	/
Model X	/	/	/	/		Passenger Door Module	/	Special Function	Soft Reset	Above Tesla_V1.00	/
Model X	/	/	/	/		Supplemental Deployment Module	/	ECU information	/	Above Tesla_V1.00	/
Model X	/	/	/	/		Supplemental Deployment Module	/	Special Function	Erase VIN	Above Tesla_V1.00	/
Model X	/	/	/	/		Supplemental Deployment Module	/	Special Function	Unlock EEPROM after crash	Above Tesla_V1.00	/
Model X	/	/	/	/		Supplemental Deployment Module	/	Trouble codes	/	Above Tesla_V1.00	/
Model X	/	/	/	/		Center Radar	/	ECU information	/	Above Tesla_V1.00	/
Model X	/	/	/	/		Center Radar	/	Special Function	Hard Reset	Above Tesla_V1.00	/
Model X	/	/	/	/		Center Radar	/	Special Function	Soft Reset	Above Tesla_V1.00	/
Model X	/	/	/	/		Center Radar	/	Trouble codes	/	Above Tesla_V1.00	/
Model X	/	/	/	/		Charging Port	/	ECU information	/	Above Tesla_V1.00	/
Model X	/	/	/	/		Charging Port	/	Special Function	Hard Reset	Above Tesla_V1.00	/

Vehicle Model	Year	Engine	Chassis	Series	Vehicle Type	System	Sub-system	Function	Sub-function	Version	Note
Model X	/	/	/	/		Charging Port	/	Special Function	Soft Reset	Above Tesla_V1.00	/
Model X	/	/	/	/		Charging Port	/	Special Function	Charge port latch calibration	Above Tesla_V1.00	/
Model X	/	/	/	/		Charging Port	/	Live data	/	Above Tesla_V1.00	/
Model X	/	/	/	/		Charging Port	/	Special Function	Charge port door sensor calibration	Above Tesla_V1.00	/
Model X	/	/	/	/		DC-DC	/	Special Function	Hard Reset	Above Tesla_V1.00	/
Model X	/	/	/	/		DC-DC	/	Special Function	Soft Reset	Above Tesla_V1.00	/
Model X	/	/	/	/		DC-DC	/	Live data	/	Above Tesla_V1.00	/
Model X	/	/	/	/		Drive Inverter	/	ECU information	/	Above Tesla_V1.00	/
Model X	/	/	/	/		Drive Inverter	/	Special Function	Hard Reset	Above Tesla_V1.00	/
Model X	/	/	/	/		Drive Inverter	/	Special Function	Soft Reset	Above Tesla_V1.00	/
Model X	/	/	/	/		Drive Inverter	/	Live data	/	Above Tesla_V1.00	/
Model X	/	/	/	/		Drive Inverter System	/	ECU information	/	Above Tesla_V1.00	/
Model X	/	/	/	/		Drive Inverter System	/	Special Function	Hard Reset	Above Tesla_V1.00	/
Model X	/	/	/	/		Drive Inverter System	/	Special Function	Soft Reset	Above Tesla_V1.00	/
Model X	/	/	/	/		Drive Inverter System	/	Live data	/	Above Tesla_V1.00	/
Model X	/	/	/	/		Driver Assist	/	Special Function	Hard Reset	Above Tesla_V1.00	/
Model X	/	/	/	/		Driver Assist	/	Special Function	Soft Reset	Above Tesla_V1.00	/
Model X	/	/	/	/		Driver Assist	/	Live data	/	Above Tesla_V1.00	/
Model X	/	/	/	/		Driver Door Controller	/	Special Function	Hard Reset	Above Tesla_V1.00	/
Model X	/	/	/	/		Driver Door Controller	/	Special Function	Soft Reset	Above Tesla_V1.00	/
Model X	/	/	/	/		Driver Side Memory Seat Module	/	Special Function	Hard Reset	Above Tesla_V1.00	/
Model X	/	/	/	/		Driver Side Memory Seat Module	/	Special Function	Soft Reset	Above Tesla_V1.00	/
Model X	/	/	/	/		Driver Side Memory Seat Module	/	Trouble codes	/	Above Tesla_V1.00	/
Model X	/	/	/	/		Driver Side Memory Seat Module	/	Live data	/	Above Tesla_V1.00	/
Model X	/	/	/	/		Electric Park Brake	/	ECU information	/	Above Tesla_V1.00	/
Model X	/	/	/	/		Electric Park Brake	/	Special Function	Hard Reset	Above Tesla_V1.00	/
Model X	/	/	/	/		Electric Park Brake	/	Special Function	Soft Reset	Above Tesla_V1.00	/
Model X	/	/	/	/		Electric Park Brake	/	Special Function	Service mode	Above Tesla_V1.00	/
Model X	/	/	/	/		Electric Park Brake	/	Live data	/	Above Tesla_V1.00	/
Model X	/	/	/	/		Electric Park Brake Monitor	/	Special Function	Hard Reset	Above Tesla_V1.00	/
Model X	/	/	/	/		Electric Park Brake Monitor	/	Special Function	Soft Reset	Above Tesla_V1.00	/
Model X	/	/	/	/		Electric Park Brake Monitor	/	Live data	/	Above Tesla_V1.00	/

Vehicle Model	Year	Engine	Chassis	Series	Vehicle Type	System	Sub-system	Function	Sub-function	Version	Note
Model X	/	/	/	/		Electric Power Assisted Steering	/	ECU information	/	Above Tesla_V1.00	/
Model X	/	/	/	/		Electric Power Assisted Steering	/	Special Function	Hard Reset	Above Tesla_V1.00	/
Model X	/	/	/	/		Electric Power Assisted Steering	/	Special Function	Soft Reset	Above Tesla_V1.00	/
Model X	/	/	/	/		Electric Power Assisted Steering	/	Trouble codes	/	Above Tesla_V1.00	/
Model X	/	/	/	/		Electric Power Assisted Steering	/	Live data	/	Above Tesla_V1.00	/
Model X	/	/	/	/		Electric Stability Program	/	ECU information	/	Above Tesla_V1.00	/
Model X	/	/	/	/		Electric Stability Program	/	Special Function	Hard Reset	Above Tesla_V1.00	/
Model X	/	/	/	/		Electric Stability Program	/	Special Function	Soft Reset	Above Tesla_V1.00	/
Model X	/	/	/	/		Electric Stability Program	/	Trouble codes	/	Above Tesla_V1.00	/
Model X	/	/	/	/		Electric Stability Program	/	Special Function	Brake bleeding	Above Tesla_V1.00	/
Model X	/	/	/	/		Electric Stability Program	/	Special Function	Steering angle sensor calibration	Above Tesla_V1.00	/
Model X	/	/	/	/		Electric Stability Program	/	Live data	/	Above Tesla_V1.00	/
Model X	/	/	/	/		Electric Stability Program 2	/	ECU information	/	Above Tesla_V1.00	/
Model X	/	/	/	/		Electric Stability Program 2	/	Special Function	Hard Reset	Above Tesla_V1.00	/
Model X	/	/	/	/		Electric Stability Program 2	/	Special Function	Soft Reset	Above Tesla_V1.00	/
Model X	/	/	/	/		Electric Stability Program 2	/	Trouble codes	/	Above Tesla_V1.00	/
Model X	/	/	/	/		High Voltage Battery System	/	Special Function	Hard Reset	Above Tesla_V1.00	/
Model X	/	/	/	/		High Voltage Battery System	/	Special Function	Soft Reset	Above Tesla_V1.00	/
Model X	/	/	/	/		Left Radar	/	Special Function	Hard Reset	Above Tesla_V1.00	/
Model X	/	/	/	/		Left Radar	/	Special Function	Soft Reset	Above Tesla_V1.00	/
Model X	/	/	/	/		Liftgate Controller	/	Special Function	Hard Reset	Above Tesla_V1.00	/
Model X	/	/	/	/		Liftgate Controller	/	Special Function	Soft Reset	Above Tesla_V1.00	/
Model X	/	/	/	/		Master Charger	/	ECU information	/	Above Tesla_V1.00	/
Model X	/	/	/	/		Master Charger	/	Special Function	Hard Reset	Above Tesla_V1.00	/
Model X	/	/	/	/		Master Charger	/	Special Function	Soft Reset	Above Tesla_V1.00	/
Model X	/	/	/	/		Master Charger	/	Trouble codes	/	Above Tesla_V1.00	/
Model X	/	/	/	/		Master Charger	/	Live data	/	Above Tesla_V1.00	/
Model X	/	/	/	/		Master Charger 6	/	ECU information	/	Above Tesla_V1.00	/
Model X	/	/	/	/		Master Charger 6	/	Special Function	Hard Reset	Above Tesla_V1.00	/
Model X	/	/	/	/		Master Charger 6	/	Special Function	Soft Reset	Above Tesla_V1.00	/
Model X	/	/	/	/		Master Charger 6	/	Live data	/	Above Tesla_V1.00	/
Model X	/	/	/	/		Master Charger 6	/	Special Function	Check fast charge disabled	Above Tesla_V1.00	/

Vehicle Model	Year	Engine	Chassis	Series	Vehicle Type	System	Sub-system	Function	Sub-function	Version	Note
Model X	/	/	/	/		Master Charger 6	/	Special Function	Clear fast charge disabled	Above Tesla_V1.00	/
Model X	/	/	/	/		Master Charger PH1	/	Special Function	Hard Reset	Above Tesla_V1.00	/
Model X	/	/	/	/		Master Charger PH1	/	Special Function	Soft Reset	Above Tesla_V1.00	/
Model X	/	/	/	/		Master Charger PH2	/	Special Function	Hard Reset	Above Tesla_V1.00	/
Model X	/	/	/	/		Master Charger PH2	/	Special Function	Soft Reset	Above Tesla_V1.00	/
Model X	/	/	/	/		Master Charger PH3	/	Special Function	Hard Reset	Above Tesla_V1.00	/
Model X	/	/	/	/		Master Charger PH3	/	Special Function	Soft Reset	Above Tesla_V1.00	/
Model X	/	/	/	/		Master Charger Relay	/	ECU information	/	Above Tesla_V1.00	/
Model X	/	/	/	/		Master Charger Relay	/	Special Function	Hard Reset	Above Tesla_V1.00	/
Model X	/	/	/	/		Master Charger Relay	/	Special Function	Soft Reset	Above Tesla_V1.00	/
Model X	/	/	/	/		Occupant Classification System	/	ECU information	/	Above Tesla_V1.00	/
Model X	/	/	/	/		Occupant Classification System	/	Special Function	Hard Reset	Above Tesla_V1.00	/
Model X	/	/	/	/		Occupant Classification System	/	Special Function	Soft Reset	Above Tesla_V1.00	/
Model X	/	/	/	/		Occupant Classification System	/	Trouble codes	/	Above Tesla_V1.00	/
Model X	/	/	/	/		Occupant Classification System	/	Special Function	Occupant Classification System (OCS) reset	Above Tesla_V1.00	/
Model X	/	/	/	/		Park Assist System	/	Special Function	Hard Reset	Above Tesla_V1.00	/
Model X	/	/	/	/		Park Assist System	/	Special Function	Soft Reset	Above Tesla_V1.00	/
Model X	/	/	/	/		Park Assist System	/	Live data	/	Above Tesla_V1.00	/
Model X	/	/	/	/		Park Assist System 2	/	Special Function	Hard Reset	Above Tesla_V1.00	/
Model X	/	/	/	/		Park Assist System 2	/	Special Function	Soft Reset	Above Tesla_V1.00	/
Model X	/	/	/	/		Passenger Side Memory Seat Module	/	Special Function	Hard Reset	Above Tesla_V1.00	/
Model X	/	/	/	/		Passenger Side Memory Seat Module	/	Special Function	Soft Reset	Above Tesla_V1.00	/
Model X	/	/	/	/		Passenger Side Memory Seat Module	/	Trouble codes	/	Above Tesla_V1.00	/
Model X	/	/	/	/		Passenger Side Memory Seat Module	/	Live data	/	Above Tesla_V1.00	/
Model X	/	/	/	/		Pedal Monitor	/	ECU information	/	Above Tesla_V1.00	/
Model X	/	/	/	/		Pedal Monitor	/	Special Function	Hard Reset	Above Tesla_V1.00	/
Model X	/	/	/	/		Pedal Monitor	/	Special Function	Soft Reset	Above Tesla_V1.00	/
Model X	/	/	/	/		Pedal Monitor	/	Live data	/	Above Tesla_V1.00	/
Model X	/	/	/	/		Positive Temperature Coefficient	/	Special Function	Hard Reset	Above Tesla_V1.00	/
Model X	/	/	/	/		Positive Temperature Coefficient	/	Special Function	Soft Reset	Above Tesla_V1.00	/
Model X	/	/	/	/		Potentiometer System	/	Special Function	Hard Reset	Above Tesla_V1.00	/
Model X	/	/	/	/		Potentiometer System	/	Special Function	Soft Reset	Above Tesla_V1.00	/

Vehicle Model	Year	Engine	Chassis	Series	Vehicle Type	System	Sub-system	Function	Sub-function	Version	Note
Model X	/	/	/	/		Rear Driver Door Handles	/	Special Function	Hard Reset	Above Tesla_V1.00	/
Model X	/	/	/	/		Rear Driver Door Handles	/	Special Function	Soft Reset	Above Tesla_V1.00	/
Model X	/	/	/	/		Remote Climate Control Module	/	Special Function	Hard Reset	Above Tesla_V1.00	/
Model X	/	/	/	/		Remote Climate Control Module	/	Special Function	Soft Reset	Above Tesla_V1.00	/
Model X	/	/	/	/		Remote Climate Control Module	/	Live data	/	Above Tesla_V1.00	/
Model X	/	/	/	/		Restraints Controller Module	/	ECU information	/	Above Tesla_V1.00	/
Model X	/	/	/	/		Restraints Controller Module	/	Special Function	Hard Reset	Above Tesla_V1.00	/
Model X	/	/	/	/		Restraints Controller Module	/	Special Function	Soft Reset	Above Tesla_V1.00	/
Model X	/	/	/	/		Restraints Controller Module	/	Trouble codes	/	Above Tesla_V1.00	/
Model X	/	/	/	/		Restraints Controller Module	/	Live data	/	Above Tesla_V1.00	/
Model X	/	/	/	/		Right Radar	/	Special Function	Hard Reset	Above Tesla_V1.00	/
Model X	/	/	/	/		Right Radar	/	Special Function	Soft Reset	Above Tesla_V1.00	/
Model X	/	/	/	/		Security Controller	/	Special Function	Hard Reset	Above Tesla_V1.00	/
Model X	/	/	/	/		Security Controller	/	Special Function	Soft Reset	Above Tesla_V1.00	/
Model X	/	/	/	/		Slave Charger	/	Special Function	Hard Reset	Above Tesla_V1.00	/
Model X	/	/	/	/		Slave Charger	/	Special Function	Soft Reset	Above Tesla_V1.00	/
Model X	/	/	/	/		Slave Charger	/	Live data	/	Above Tesla_V1.00	/
Model X	/	/	/	/		Slave Charger PH1	/	Special Function	Hard Reset	Above Tesla_V1.00	/
Model X	/	/	/	/		Slave Charger PH1	/	Special Function	Soft Reset	Above Tesla_V1.00	/
Model X	/	/	/	/		Slave Charger PH2	/	Special Function	Hard Reset	Above Tesla_V1.00	/
Model X	/	/	/	/		Slave Charger PH2	/	Special Function	Soft Reset	Above Tesla_V1.00	/
Model X	/	/	/	/		Slave Charger PH3	/	Special Function	Hard Reset	Above Tesla_V1.00	/
Model X	/	/	/	/		Slave Charger PH3	/	Special Function	Soft Reset	Above Tesla_V1.00	/
Model X	/	/	/	/		Sunroof Controller	/	Special Function	Hard Reset	Above Tesla_V1.00	/
Model X	/	/	/	/		Sunroof Controller	/	Special Function	Soft Reset	Above Tesla_V1.00	/
Model X	/	/	/	/		Tesla Air Suspension System	/	ECU information	/	Above Tesla_V1.00	/
Model X	/	/	/	/		Tesla Air Suspension System	/	Special Function	Hard Reset	Above Tesla_V1.00	/
Model X	/	/	/	/		Tesla Air Suspension System	/	Special Function	Soft Reset	Above Tesla_V1.00	/
Model X	/	/	/	/		Tesla Air Suspension System	/	Special Function	Air Suspension Leveling High	Above Tesla_V1.00	/
Model X	/	/	/	/		Tesla Air Suspension System	/	Special Function	Air Suspension Leveling Low	Above Tesla_V1.00	/
Model X	/	/	/	/		Tesla Air Suspension System	/	Special Function	Air Suspension Leveling Standard	Above Tesla_V1.00	/
Model X	/	/	/	/		Tesla Air Suspension System	/	Special Function	Air suspension measure pressures	Above Tesla_V1.00	/

Vehicle Model	Year	Engine	Chassis	Series	Vehicle Type	System	Sub-system	Function	Sub-function	Version	Note
Model X	/	/	/	/		Tesla Air Suspension System	/	Special Function	Reset air suspension crash flag	Above Tesla_V1.00	/
Model X	/	/	/	/		Tesla Air Suspension System	/	Live data	/	Above Tesla_V1.00	/
Model X	/	/	/	/		Tesla Air Suspension System	/	Special Function	Air suspension leveling - very high	Above Tesla_V1.00	/
Model X	/	/	/	/		Tesla Air Suspension System	/	Special Function	Air suspension leveling - very low	Above Tesla_V1.00	/
Model X	/	/	/	/		Tesla Air Suspension System	/	Special Function	Finish Service mode for air suspension	Above Tesla_V1.00	/
Model X	/	/	/	/		Tesla Air Suspension System	/	Special Function	Tesla Air Suspension (TAS) service mode	Above Tesla_V1.00	/
Model X	/	/	/	/		Thermal Controller	/	ECU information	/	Above Tesla_V1.00	/
Model X	/	/	/	/		Thermal Controller	/	Special Function	Hard Reset	Above Tesla_V1.00	/
Model X	/	/	/	/		Thermal Controller	/	Special Function	Soft Reset	Above Tesla_V1.00	/
Model X	/	/	/	/		Thermal Controller	/	Trouble codes	/	Above Tesla_V1.00	/
Model X	/	/	/	/		Thermal Controller	/	Special Function	Start refill or drain	Above Tesla_V1.00	/
Model X	/	/	/	/		Thermal Controller	/	Special Function	Stop refill or drain	Above Tesla_V1.00	/
Model X	/	/	/	/		Thermal Controller	/	Live data	/	Above Tesla_V1.00	/
Model X	/	/	/	/		Thermal Controller	/	Special Function	Perform 'Coolant air purge'	Above Tesla_V1.00	/
Model X	/	/	/	/		Tuner	/	Special Function	Hard Reset	Above Tesla_V1.00	/
Model X	/	/	/	/		Tuner	/	Special Function	Soft Reset	Above Tesla_V1.00	/
Model X	/	/	/	/		Tyre Pressure Monitor System	/	Special Function	Hard Reset	Above Tesla_V1.00	/
Model X	/	/	/	/		Tyre Pressure Monitor System	/	Special Function	Soft Reset	Above Tesla_V1.00	/
Model X	/	/	/	/		Tyre Pressure Monitor System	/	Trouble codes	/	Above Tesla_V1.00	/
Model X	/	/	/	/		Tyre Pressure Monitor System	/	Special Function	Read TPMS sensor ID	Above Tesla_V1.00	/
Model X	/	/	/	/		Tyre Pressure Monitor System	/	Special Function	Write TPMS sensor ID	Above Tesla_V1.00	/
Model X	/	/	/	/		Tyre Pressure Monitor System	/	Live data	/	Above Tesla_V1.00	/
Model X	/	/	/	/		eFUSE	/	ECU information	/	Above Tesla_V1.00	/
Model X	/	/	/	/		eFUSE	/	Special Function	Hard Reset	Above Tesla_V1.00	/
Model X	/	/	/	/		eFUSE	/	Special Function	Soft Reset	Above Tesla_V1.00	/
Model X	/	/	/	/		eFUSE	/	Live data	/	Above Tesla_V1.00	/
Model X	/	/	/	/		iBooster	/	ECU information	/	Above Tesla_V1.00	/
Model X	/	/	/	/		iBooster	/	Special Function	Hard Reset	Above Tesla_V1.00	/
Model X	/	/	/	/		iBooster	/	Special Function	Soft Reset	Above Tesla_V1.00	/
Model X	/	/	/	/		iBooster	/	Trouble codes	/	Above Tesla_V1.00	/
Model X	/	/	/	/		iBooster	/	Live data	/	Above Tesla_V1.00	/
Model X	/	/	/	/		Body Controls (2nd Row Center)	/	ECU information	/	Above Tesla_V1.00	/

Vehicle Model	Year	Engine	Chassis	Series	Vehicle Type	System	Sub-system	Function	Sub-function	Version	Note
Model X	/	/	/	/		Body Controls (2nd Row Center)	/	Special Function	Hard Reset	Above Tesla_V1.00	/
Model X	/	/	/	/		Body Controls (2nd Row Center)	/	Special Function	Soft Reset	Above Tesla_V1.00	/
Model X	/	/	/	/		Body Controls (2nd Row Left)	/	ECU information	/	Above Tesla_V1.00	/
Model X	/	/	/	/		Body Controls (2nd Row Left)	/	Special Function	Hard Reset	Above Tesla_V1.00	/
Model X	/	/	/	/		Body Controls (2nd Row Left)	/	Special Function	Soft Reset	Above Tesla_V1.00	/
Model X	/	/	/	/		Body Controls (2nd Row Right)	/	ECU information	/	Above Tesla_V1.00	/
Model X	/	/	/	/		Body Controls (2nd Row Right)	/	Special Function	Hard Reset	Above Tesla_V1.00	/
Model X	/	/	/	/		Body Controls (2nd Row Right)	/	Special Function	Soft Reset	Above Tesla_V1.00	/
Model X	/	/	/	/		Body Controls (Central)	/	ECU information	/	Above Tesla_V1.00	/
Model X	/	/	/	/		Body Controls (Central)	/	Special Function	Hard Reset	Above Tesla_V1.00	/
Model X	/	/	/	/		Body Controls (Central)	/	Special Function	Soft Reset	Above Tesla_V1.00	/
Model X	/	/	/	/		Body Controls (Central)	/	Special Function	Reset remote unlock security key	Above Tesla_V1.00	/
Model X	/	/	/	/		Body Controls (Central)	/	Special Function	Calibrate steering column	Above Tesla_V1.00	/
Model X	/	/	/	/		Body Controls (Falcon Driver)	/	ECU information	/	Above Tesla_V1.00	/
Model X	/	/	/	/		Body Controls (Falcon Driver)	/	Special Function	Hard Reset	Above Tesla_V1.00	/
Model X	/	/	/	/		Body Controls (Falcon Driver)	/	Special Function	Soft Reset	Above Tesla_V1.00	/
Model X	/	/	/	/		Body Controls (Falcon Passenger)	/	ECU information	/	Above Tesla_V1.00	/
Model X	/	/	/	/		Body Controls (Falcon Passenger)	/	Special Function	Hard Reset	Above Tesla_V1.00	/
Model X	/	/	/	/		Body Controls (Falcon Passenger)	/	Special Function	Soft Reset	Above Tesla_V1.00	/
Model X	/	/	/	/		Body Controls (Front Driver Door)	/	ECU information	/	Above Tesla_V1.00	/
Model X	/	/	/	/		Body Controls (Front Driver Door)	/	Special Function	Hard Reset	Above Tesla_V1.00	/
Model X	/	/	/	/		Body Controls (Front Driver Door)	/	Special Function	Soft Reset	Above Tesla_V1.00	/
Model X	/	/	/	/		Body Controls (Front Driver Door)	/	Special Function	Driver - extend	Above Tesla_V1.00	/
Model X	/	/	/	/		Body Controls (Front Driver Door)	/	Special Function	Driver - retract	Above Tesla_V1.00	/
Model X	/	/	/	/		Body Controls (Front Driver Door)	/	Special Function	Driver - stop	Above Tesla_V1.00	/
Model X	/	/	/	/		Body Controls (Front Passenger Door)	/	ECU information	/	Above Tesla_V1.00	/
Model X	/	/	/	/		Body Controls (Front Passenger Door)	/	Special Function	Hard Reset	Above Tesla_V1.00	/
Model X	/	/	/	/		Body Controls (Front Passenger Door)	/	Special Function	Soft Reset	Above Tesla_V1.00	/
Model X	/	/	/	/		Body Controls (Front Passenger Door)	/	Special Function	Passenger - extend	Above Tesla_V1.00	/
Model X	/	/	/	/		Body Controls (Front Passenger Door)	/	Special Function	Passenger - retract	Above Tesla_V1.00	/
Model X	/	/	/	/		Body Controls (Front Passenger Door)	/	Special Function	Passenger - stop	Above Tesla_V1.00	/
Model X	/	/	/	/		Body Controls (Front)	/	ECU information	/	Above Tesla_V1.00	/

Vehicle Model	Year	Engine	Chassis	Series	Vehicle Type	System	Sub-system	Function	Sub-function	Version	Note
Model X	/	/	/	/		Body Controls (Front)	/	Special Function	Hard Reset	Above Tesla_V1.00	/
Model X	/	/	/	/		Body Controls (Front)	/	Special Function	Soft Reset	Above Tesla_V1.00	/
Model X	/	/	/	/		Body Controls (Rear Driver Door)	/	ECU information	/	Above Tesla_V1.00	/
Model X	/	/	/	/		Body Controls (Rear Driver Door)	/	Special Function	Hard Reset	Above Tesla_V1.00	/
Model X	/	/	/	/		Body Controls (Rear Driver Door)	/	Special Function	Soft Reset	Above Tesla_V1.00	/
Model X	/	/	/	/		Body Controls (Rear Passenger Door)	/	ECU information	/	Above Tesla_V1.00	/
Model X	/	/	/	/		Body Controls (Rear Passenger Door)	/	Special Function	Hard Reset	Above Tesla_V1.00	/
Model X	/	/	/	/		Body Controls (Rear Passenger Door)	/	Special Function	Soft Reset	Above Tesla_V1.00	/
Model X	/	/	/	/		Body Controls (Rear)	/	ECU information	/	Above Tesla_V1.00	/
Model X	/	/	/	/		Body Controls (Rear)	/	Special Function	Hard Reset	Above Tesla_V1.00	/
Model X	/	/	/	/		Body Controls (Rear)	/	Special Function	Soft Reset	Above Tesla_V1.00	/
Model X	/	/	/	/		Body Controls (Rear)	/	Special Function	Rear wing calibration	Above Tesla_V1.00	/
Model X	/	/	/	/		Lower Right Capacitive Sensor 1	/	ECU information	/	Above Tesla_V1.00	/
Model X	/	/	/	/		Lower Right Capacitive Sensor 1	/	Special Function	Hard Reset	Above Tesla_V1.00	/
Model X	/	/	/	/		Lower Right Capacitive Sensor 1	/	Special Function	Soft Reset	Above Tesla_V1.00	/
Model X	/	/	/	/		Lower left Capacitive Sensor 1	/	ECU information	/	Above Tesla_V1.00	/
Model X	/	/	/	/		Lower left Capacitive Sensor 1	/	Special Function	Hard Reset	Above Tesla_V1.00	/
Model X	/	/	/	/		Lower left Capacitive Sensor 1	/	Special Function	Soft Reset	Above Tesla_V1.00	/
Model X	/	/	/	/		Upper Right Capacitive Sensor 1	/	Special Function	Hard Reset	Above Tesla_V1.00	/
Model X	/	/	/	/		Upper Right Capacitive Sensor 1	/	Special Function	Soft Reset	Above Tesla_V1.00	/
Model X	/	/	/	/		Upper left Capacitive Sensor 1	/	Special Function	Hard Reset	Above Tesla_V1.00	/
Model X	/	/	/	/		Upper left Capacitive Sensor 1	/	Special Function	Soft Reset	Above Tesla_V1.00	/
Model X	/	/	/	/		Slave Charger 6	/	Live data	/	Above Tesla_V1.00	/

ABOUT

About Autel
Latest News & Resources
Contact Us

SUPPORT

Tech Support
Forum
FAQs
Update Info
Downloads
Training Videos
Warranty & Return
Vehicle Coverage

LEGAL

Terms of Use
Privacy Policy

CONTACT US

Phone: 0086-755-8614 7779 (China)
1-855-288-3587 Mon-Fri, 9am-9pm EST (US)
Email: support@autel.com (China Support)
ussupport@autel.com (US Support)
Career Opportunities: careers@autel.com

JOIN THE AUTEL EMAIL LIST

Subscribe 

AUTEL

© Intelligent Technology Corp., Ltd.
2004-2020. All Rights Reserved.



Language ▾